


# Asset Gateway-55

Installation guide

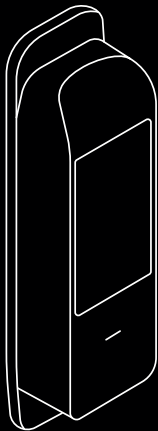

Français se trouve au dos.

**motive**

English

---

## What's in the box



Asset Gateway



Self-tapping screws (4) with washers (4)



Solar mount plate



Alcohol wipes



M3 screws (4)



Zip ties

---

## Installation

- 1 Download and log in to the **Motive Fleet App** from Google Play Store or Apple App Store.
- 2 Go to the Devices tab.
- 3 Follow the in-app instructions to guide you through installing the Asset Gateway.
- 4 Visit [gomotive.com/ag-install](https://gomotive.com/ag-install) for detailed information and recommendations on installing and assigning your Asset Gateway.

---

## Understanding the LEDs

The LED will light up briefly when motion is detected.



### **Solid green**

Device is working properly

---



### **Solid red**

Poor cell connectivity. The device will transmit data once a cellular signal is restored.

---



### **Blinking green**

Firmware update in progress

---

## Note

This device contains license-exempt transmitters/receivers that comply with Part 15 of the FCC Rules and with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment and RSS 102 RF exposure compliance requirements. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. Changes or modifications not expressly approved by Motive could void the user's authority to operate this equipment.

---

## Troubleshooting

855-434-3564

support@gomotive.com

help.gomotive.com

---


## Resources



Scan this code or visit [gomotive.com/ag-install](https://gomotive.com/ag-install) for detailed information and recommendations on installing and assigning your Asset Gateway.

# Passerelle d'actifs-55

Guide d'installation

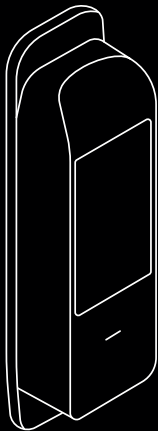

For English, please turn over.

**motive**

Français

---

## Ce qu'il y a dans la boîte



Passerelle  
d'actifsy



Vis autotaraudeuses (4)  
avec rondelles (4)



Plaque de  
montage solaire



Lingette imbibée  
d'alcool



Vis M3 (4)



Attaches zippés

---

## Installation

- 1 Téléchargez et connectez-vous à l'**application Motive Fleet** depuis Google Play Store ou le Apple App Store.
- 2 Accédez à l'onglet Appareils.
- 3 Suivez les instructions de l'application pour vous guider dans l'installation de la passerelle d'actifs.
- 4 Visitez [gomotive.com/ag-install](https://gomotive.com/ag-install) pour des informations détaillées et des recommandations sur l'installation et l'attribution de votre passerelle.



---

## Comprendre les LED

La LED s'allume brièvement lorsqu'un mouvement est détecté.



### Vert

L'appareil fonctionne correctement

---



### Rouge

Mauvaise connectivité cellulaire. L'appareil transmettra les données une fois qu'un signal cellulaire sera rétabli.

---



### Vert clignotant

Mise à jour du micrologiciel en cours

---

## Remarque

Cet appareil contient des émetteurs/récepteurs exempts de licence qui sont conformes à la partie 15 des règles de la FCC et aux flux RSS exempts de licence d'Innovation, Sciences et Développement économique Canada. Son fonctionnement est soumis aux deux conditions suivantes: (1) cet appareil ne doit pas causer d'interférences nuisibles et (2) cet appareil doit accepter toute interférence reçue, y compris les interférences susceptibles de provoquer un fonctionnement indésirable.

Cet équipement est conforme aux limites d'exposition aux rayonnements RF de la FCC établies pour un environnement non contrôlé et aux exigences de conformité d'exposition aux RF RSS 102. Cet équipement doit être installé et utilisé avec une distance minimale de 20 centimètres entre le radiateur et votre corps. Cet émetteur ne doit pas être situé ou fonctionner en conjonction avec une autre antenne ou un autre émetteur. Les changements ou modifications non expressément approuvés par Motive peuvent annuler le droit de l'utilisateur à faire fonctionner cet équipement.

---

## Dépannage

855-434-3564

support@gomotive.com

help.gomotive.com

---

## Ressources



Scannez ce code ou visitez [gomotive.com/ag-install](https://gomotive.com/ag-install) pour des informations détaillées et des recommandations sur l'installation et l'attribution de votre passerelle.