



Cable VCBL-Y-OBD2

AI Dashcam Plus installation guide for vehicles
with an OBD-II Port

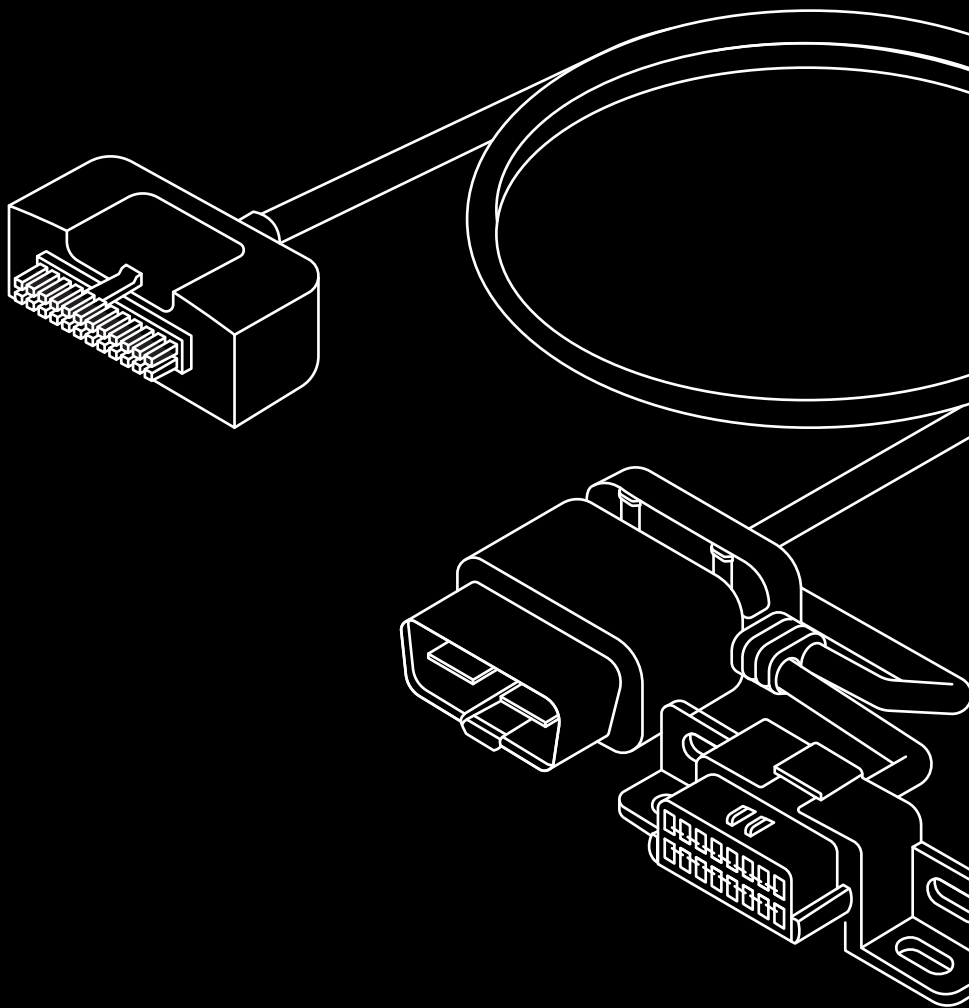


motive

In the box



Cable VCBL-Y-OB2



Cable ties

Tools Required


- **Screwdriver Set**
- **Plastic prybar**
- **Socket set**

Safety Precautions

Before starting the installation, ensure the following:

- The parking brake is engaged.
- The engine is off.
- The main power switch (if available) is turned off.


The VCBL-Y-OB2 cable includes three labeled ends:

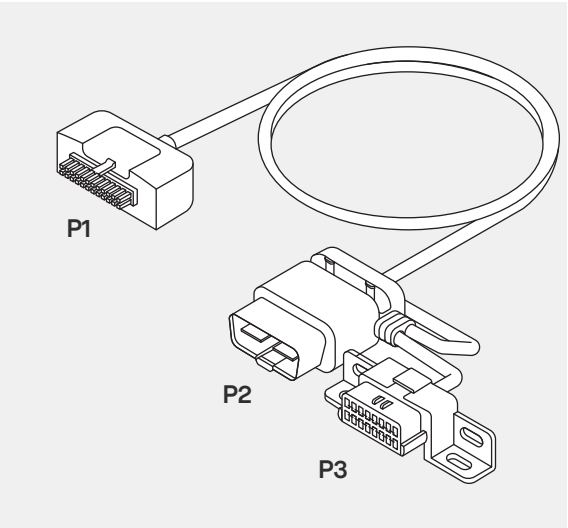

Cable End	Description
P1	Connects to the vehicle adapter
P2	Connects to the vehicle's diagnostic port
P3	Optional: Connects to the dashboard receptacle to maintain the diagnostic port accessible for other uses. Required with Y-cable installations

1. Locating the OBD2 port

The OBD2 Diagnostic Port is typically located on the driver's side of the cab, beneath the dash panel. It may also be found in the center console or under the dashboard near the steering column. It is Black in color.

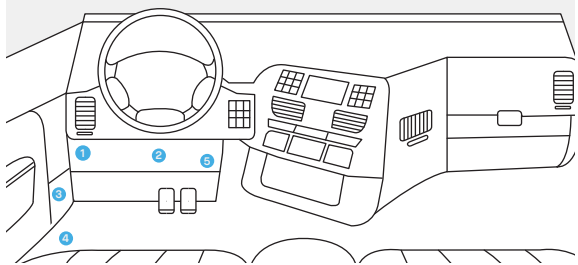


Note: The numbers in the above image indicate the most probable locations of the diagnostic port.

2. Connect the AI Dashcam Plus

WARNING! California state law prohibits relocating the in-vehicle diagnostic connector during installation. To remain compliant, always follow the Direct Plug-In installation instructions when installing this cable.


2.1 Plug the AI Dashcam Plus

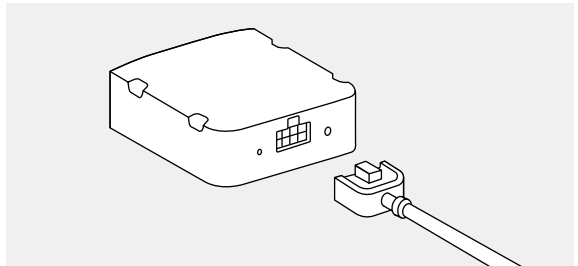

Plug the AI Dashcam Plus cable into the vehicle adapter

2. Connect the AI Dashcam Plus

2.2 Connect the vehicle adapter

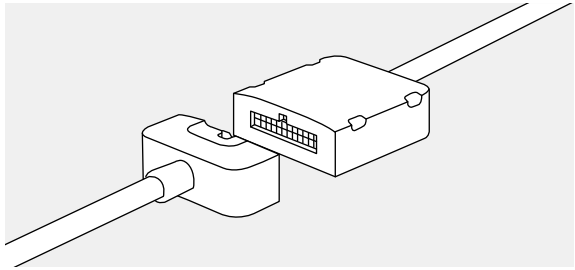


Plug the vehicle adapter into one end of the Y cable (P1).

2.3 Connect the cable

Option 1: Direct Cable Connection

Use this method if you're connecting the cable directly into the vehicle's diagnostic port or operating in the state of California

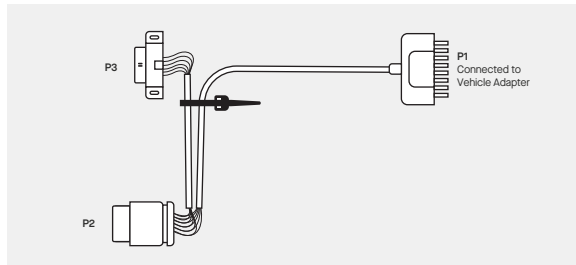

Steps:


1. Plug the male end of the Motive cable (P2) directly into the vehicle's diagnostic port.
2. Secure the connection and use a cable tie to fasten the shorter cable P3 (which has the spare diagnostic connector) to the main cable. Place the zip tie near the spare diagnostic connector for secure fastening
3. The P3 end is not used for this installation type

Note: The OEM diagnostic port will not be available while the cable is plugged in.

2. Connect the AI Dashcam Plus

Option 2: Y-Cable Connection

For covert installations, you'll want to use the Y splitter

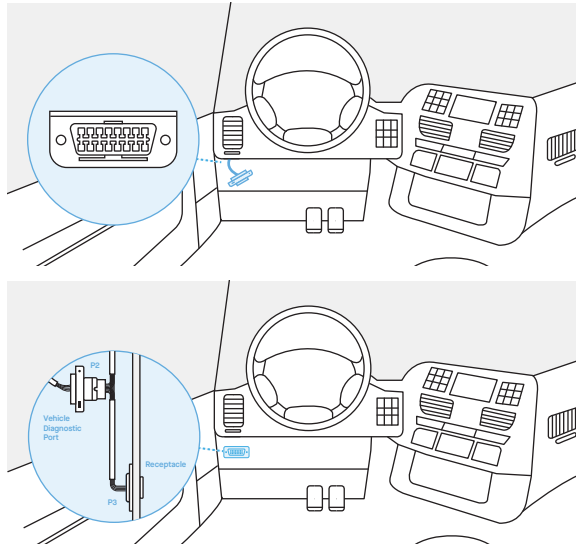

Steps:


1. Remove the OEM diagnostic port from its receptacle in the dashboard.
2. Plug the male end of the Motive cable (P2) into the removed diagnostic port.
3. Install and secure the female end of the Motive Cable (P3) using the appropriate clip into the original receptacle where the diagnostic port was located in the vehicle.

The vehicle's diagnostics will remain accessible using the additional port on the Cable VCBL-Y-OB2 (P3)

3. Test and Mount the AI Dashcam Plus


Refer to the AI Dashcam Plus Installation Guide available at gomotive.com/aidashcamplus-install for instructions on testing and mounting the device to the vehicle's windshield or the left side of the rearview mirror.

Once mounted, the final installation should resemble the example shown here

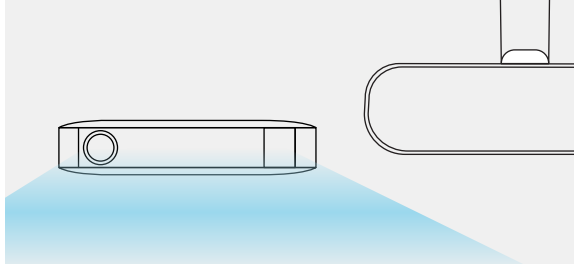

Power Connection

Start the vehicle's engine. Once the alert/right LED turns blue, your AI Dashcam Plus is powered on and connected!

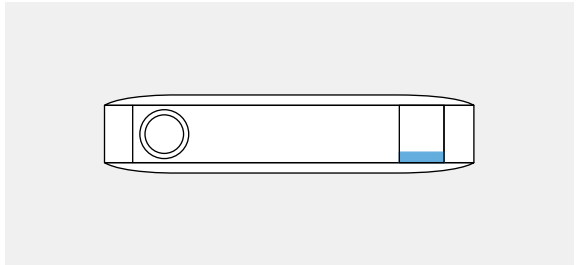

Potential Unlocked

motive

gomotive.com