


Cable 3015

Also applicable to Cable 3017 and Cable 3010

Vehicle Gateway installation guide
for vehicles with an OBD-II Port

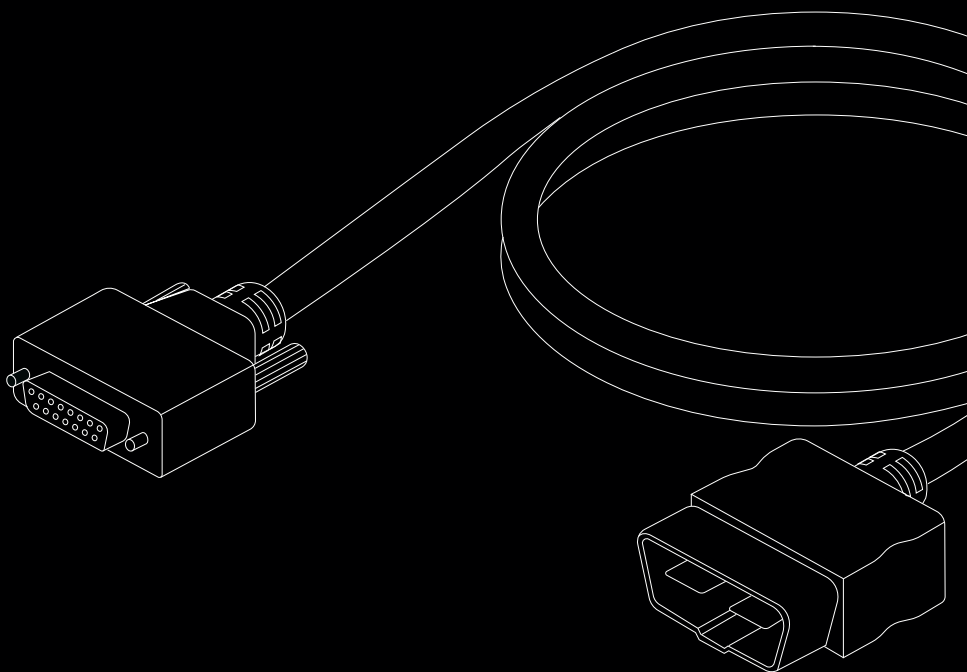

motive

Step 1


Ensure the vehicle is safe to install the Motive Vehicle Gateway:

- The parking brake is engaged.
- The engine is off.
- The main power switch (if available) is turned off.

Step 2

Locate the OBD-II port.


This port is typically located on the driver's side under the steering wheel column and occasionally under the passenger dash panel.

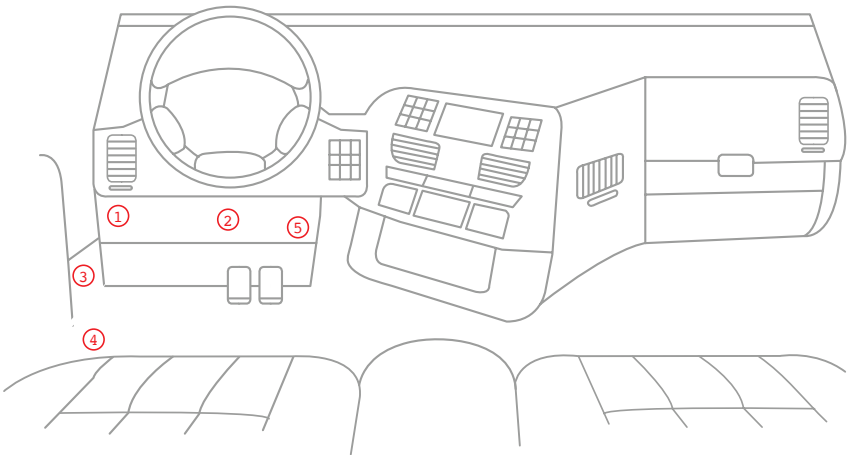

To help find the location of the OBD-II port for your specific vehicle visit: <https://bit.ly/2Q2BtZM>


Step 3

Connect and secure the OBD-II end of the Motive cable to the vehicle's OBD-II port.

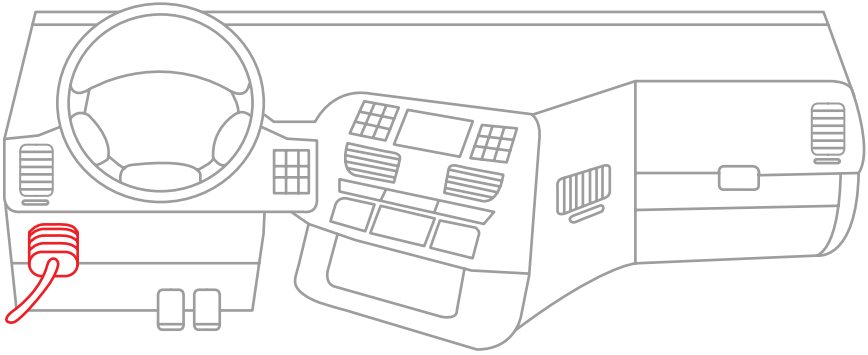

Use the zip ties provided to secure the cables.

Attach the 15-pin connector to the Vehicle Gateway.

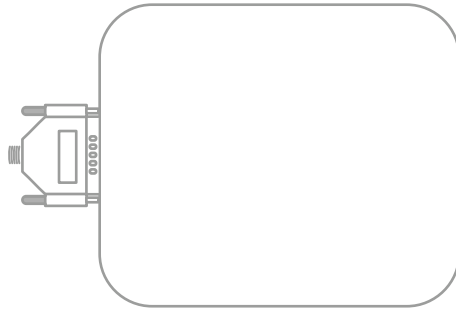


Secure the 15-pin connector onto the Vehicle Gateway using the thumbscrews.

Prior to mounting the Vehicle Gateway, use the provided alcohol swabs to clean the mounting area.


Remove the backing from the adhesive strip on the back of the Vehicle Gateway and attach it to the mounting area.

Step 3 (continued)

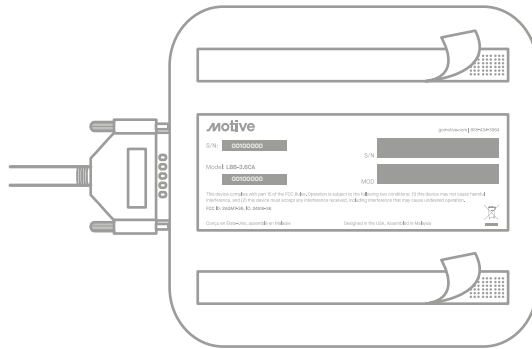



Motive recommends installing the Vehicle Gateway near the windshield, as well as away from any vents, electrical components and at least 12 inches away from any metal components.

The Vehicle Gateway may be installed in alternative locations, such as the wheel well, provided it meets the aforementioned requirements. Please ensure all cabling and devices are secured to avoid interfering with safe operation of the vehicle.

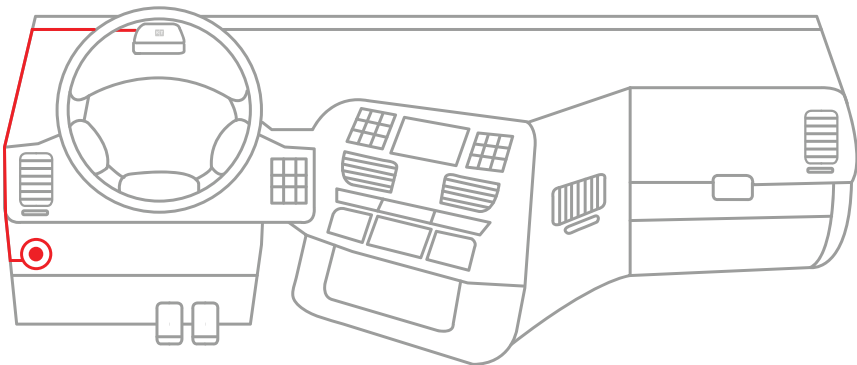

Step 4

Once plugged in, the indicator lights will flash momentarily before turning solid red. After approximately one minute, the left-side indicator light will turn green indicating a successful GPS/GNSS connection.

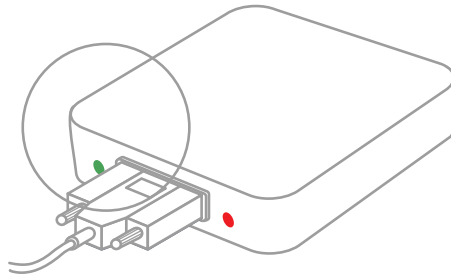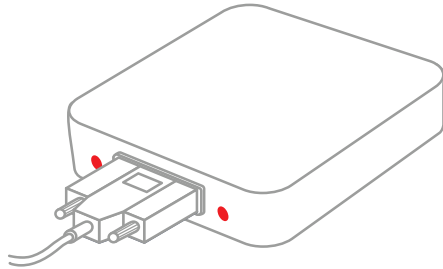

Additionally, GPS/GNSS performance may degrade if the vehicle gateway does not have clear line of sight to the sky.

Step 5

Once the driver connects to the Vehicle Gateway using the Driver App available on iOS and Android, the right-side indicator light will turn green indicating a successful Bluetooth connection

WARNING:

For vehicles that may operate in the State of California, regulations may prohibit the installation of any Y-cable configuration if it involves relocating the in-vehicle diagnostic port. If the vehicle may be operated in California, ensure the installation does not relocate the diagnostic port. Motive customers are solely responsible for their compliance with all applicable laws and regulations.

Please refer to the **Motive Driver App Guide** for more details on the Motive mobile platform. For any assistance, please contact Motive support at **855-434-3564** or email **support@gomotive.com**.

Potential Unlocked